



	<b>(</b>

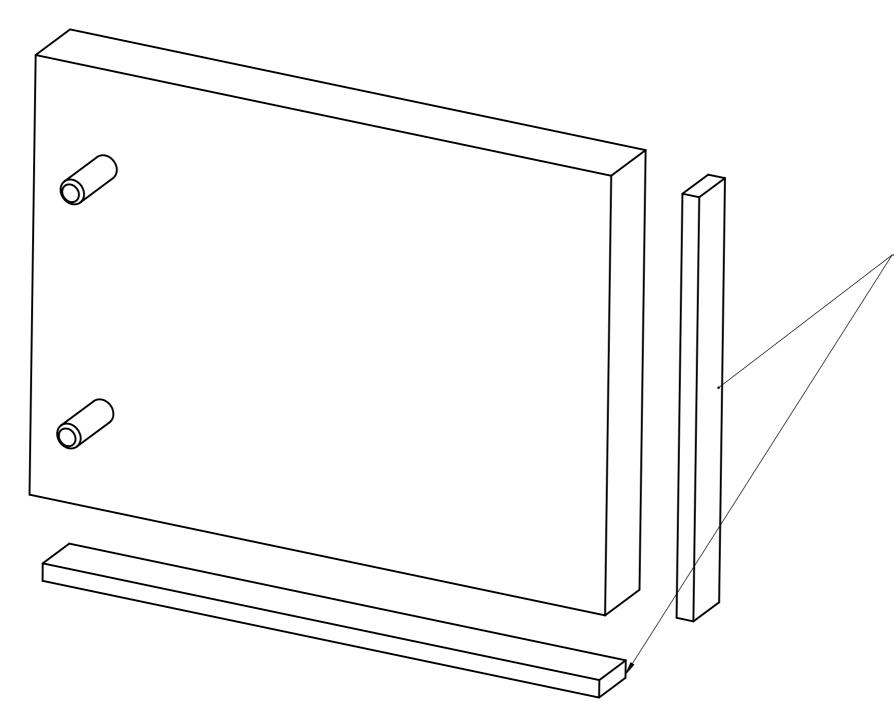


## Put Sticker #1 and #2 to the radiator



•		
	Stick the radiator in font of the fan	1


0 0	0	
	1	

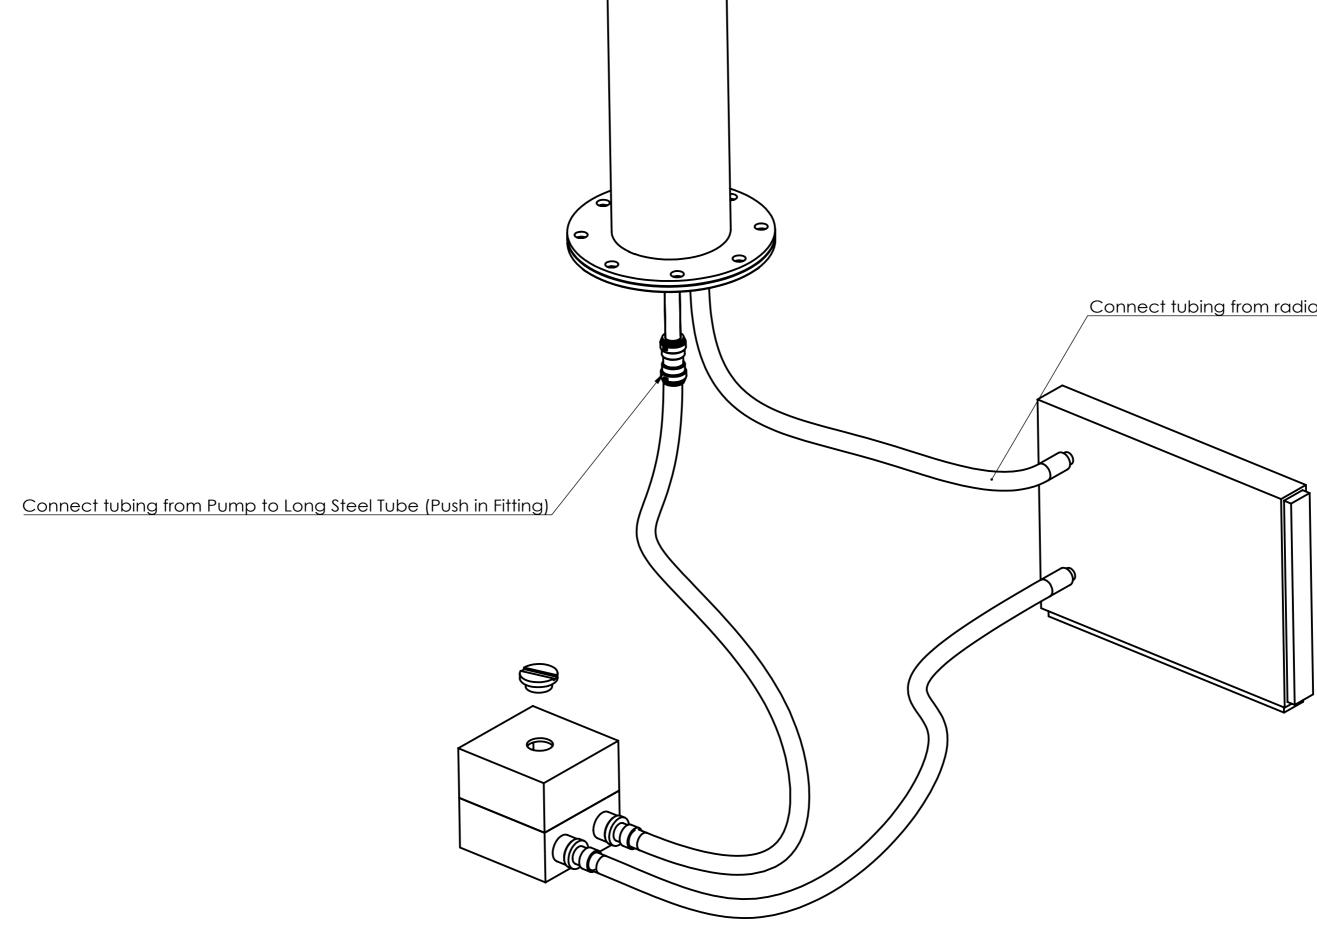

## Connect tubing from radiator to short barb fitting

- 1. Turn on the pump
- 2. Fill water to this hole until the system is full

3. Put the cap back after no air bubbles in the system

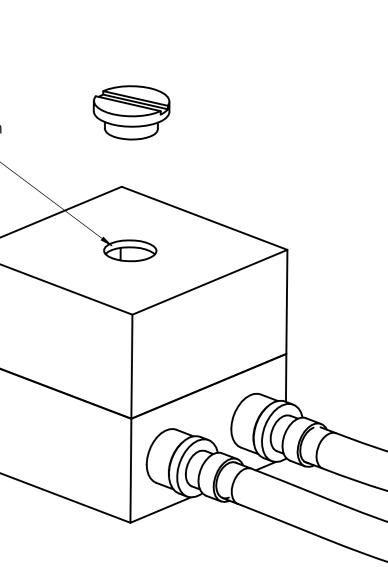

(